




CYGOLITE DASH™

User Guide

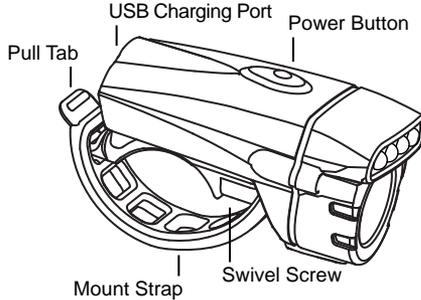

Charging the battery

Fully charge the battery before using your new lighting system.

- ① Connect the micro USB charging cable to the **USB charging port** and a computer/wall adapter.
- ② The green lit **power button** indicates the charging status.

Flashing Green = Charging **Solid Green** = Fully Charged

Charging time is about 3 hours.*

Mounting the light

Side to Side Swivel Adjustment

Adjust your preferred side angle, then tighten the **swivel screw**. Tighten the screw periodically, if needed.

Handlebar Mounting

Wrap and secure the **mount strap** around the handlebar.

*Note: Face the **pull tab** upwards as shown. Make sure all parts are fastened properly before using.*

Operating the light

Turn On/Off

Press **power button** to turn on.

Press and hold the **power button** to turn off.

Scrolling Through Light Modes

Press the **power button**.

Battery Low Indicator

The **power button** flashes rapidly when there is about 10 minutes of power remaining.

* Note: Actual charging times may vary depending on charging method.

WARNING: Cycling during night and day is an inherently dangerous activity, but can be enjoyed when proper safety measures are taken. Exercise caution at all times and adhere strictly to traffic laws. This light was designed as a visual aid, not a device to prevent collision with other vehicles. Cygolite does not accept liability for injuries sustained from product usage. This light is not a replacement or substitute for CPSC approved reflectors. Never remove your bicycle's original reflectors. Always wear safety gear such as a helmet. Only use flashing modes during daytime. State laws regarding flashing bicycle lights may vary among states. Use the flashing modes in accordance to local, state, and federal laws. Due to the intensity of this light, do not look directly at the light and/or do not leave it unattended. The light may become hot during use. Provide adequate airflow to the light and use caution when handling. Do not carry or store the light when it is hot or shortly after use. Never disassemble, modify, and/or substitute any parts of this light. Keep the system away from combustible materials. Do not operate or submerge under water. Always verify that all parts are properly secured. Do not use if there is any damage, wear, or missing parts. Carrying a flash light is recommended. Always handle connectors by the plug, not the cable itself. Charge the battery with an approved 5V charger only. Using any other charger may result in damage or injury. The charger is for indoor use only. Unplug the battery from the charger after a full charge or if the battery is not in use.

This light is for bicycle use only.



Cygolite
Irvine, California
USA

© 2015 Cygolite. All rights reserved. No part of this user guide may be reproduced, modified, distributed, or stored in any form without prior written permission of the copyright owners. Patent pending.